


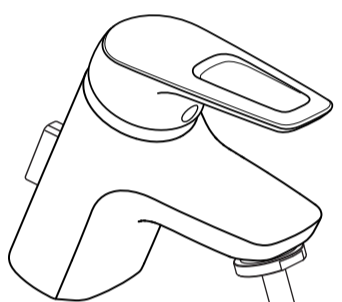
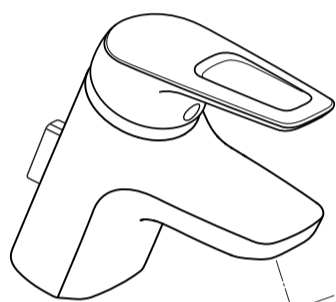
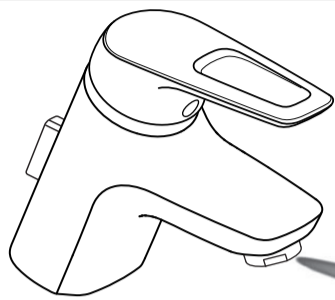
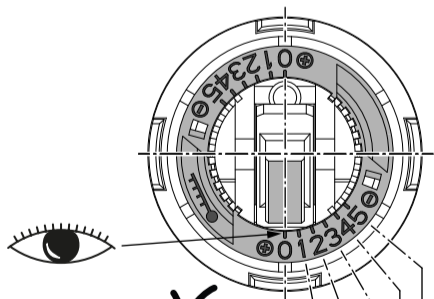
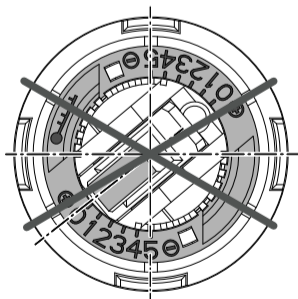


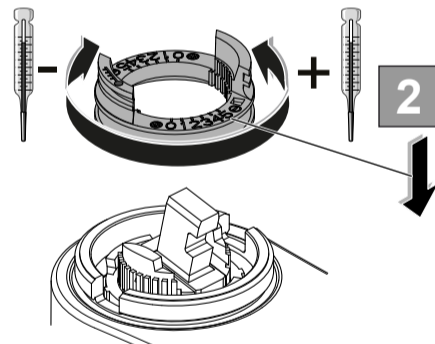

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto / Parte de reposição / Reserveonderdelen / Reservdelar / Reservdeler / Varaosat / Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely / Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Reservju daļu

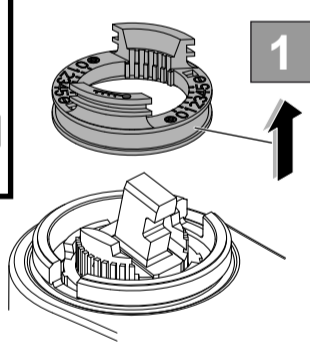


F960965NU

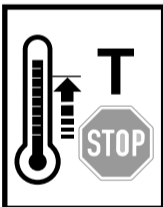


P	T	°C	0	1	2	3	4	5
			°C	°C	°C	°C	°C	°C
0,3 MPa 3 bar	50°C	15°C	50	49	44	40	35	33
	65°C	15°C	65	63	57	50	44	40
	85°C	15°C	85	83	74	64	56	50

Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com


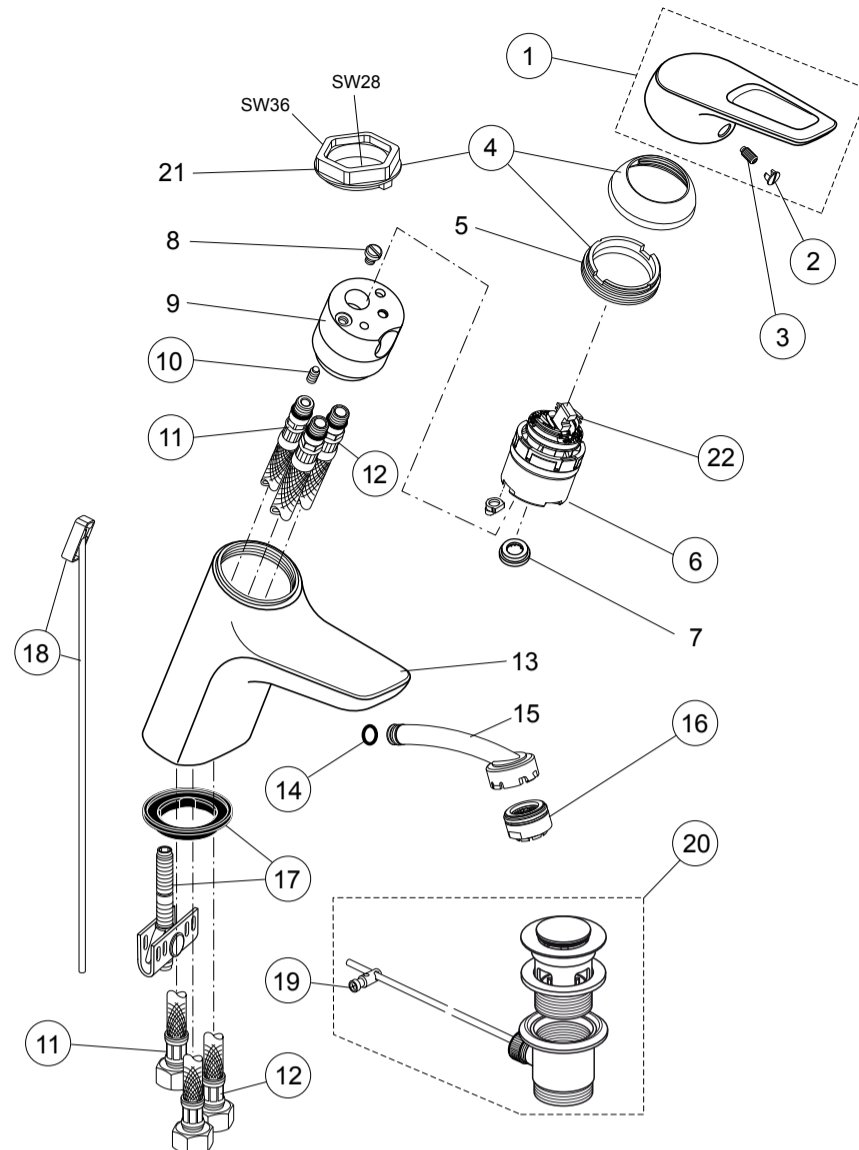










- | | | | | | | | |
|---|-------------|----|-------------|----|-------------|----|-------------|
| 1 | A 963313 AA | 6 | A 861156 NU | 14 | A 961118 NU | 19 | A 963404 NU |
| 2 | A 963054 NU | 10 | A 963309 NU | 16 | A 963681 AA | 20 | A 961230 AA |
| 3 | A 963309 NU | 11 | A 963680 NU | 17 | A 960949 NU | 22 | A 861181 NU |
| 4 | B 960862 AA | 12 | A 963679 NU | 18 | A 963357 AA | | |

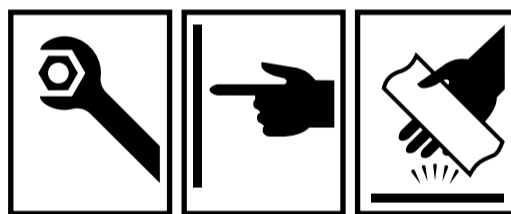

CERAMIX BLUE
A 5650 ..



0719 / A 866 445
(+ A 865 612)
Made in Germany

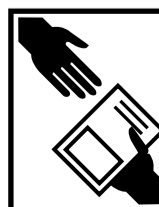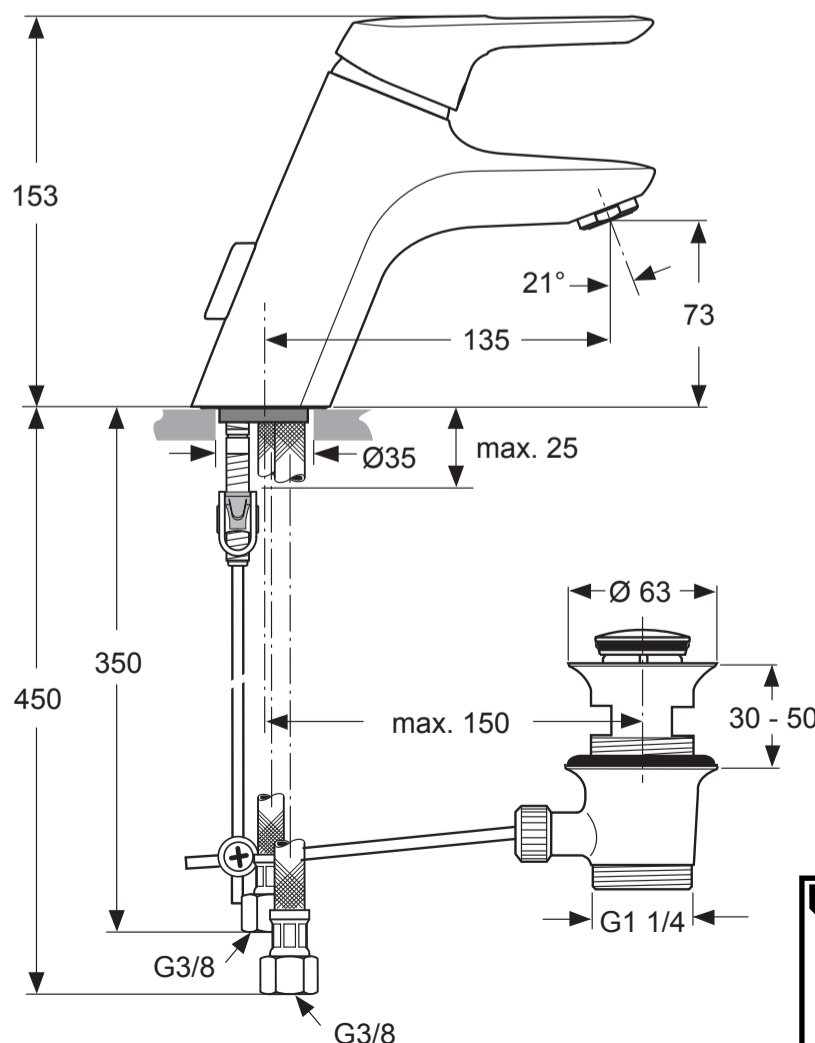

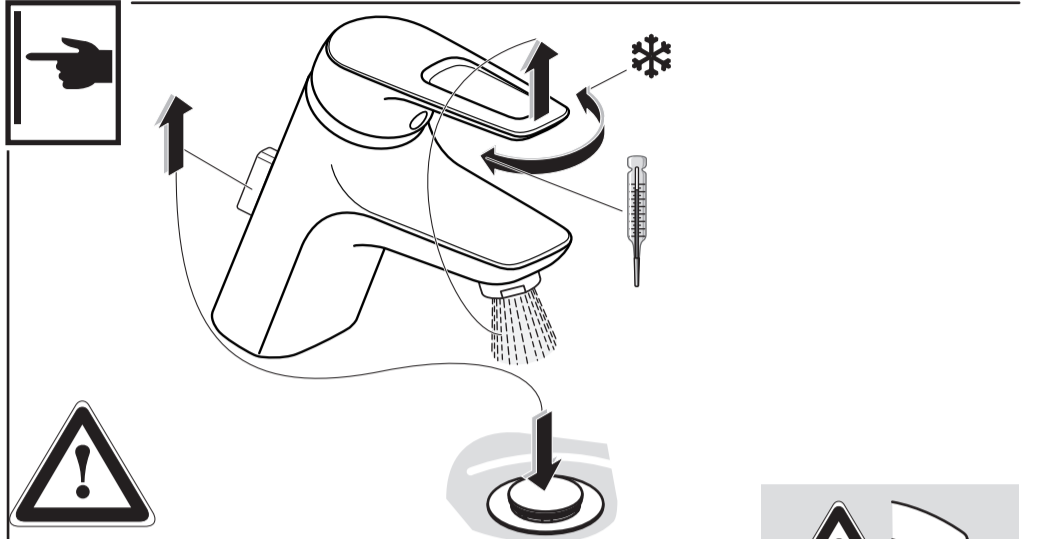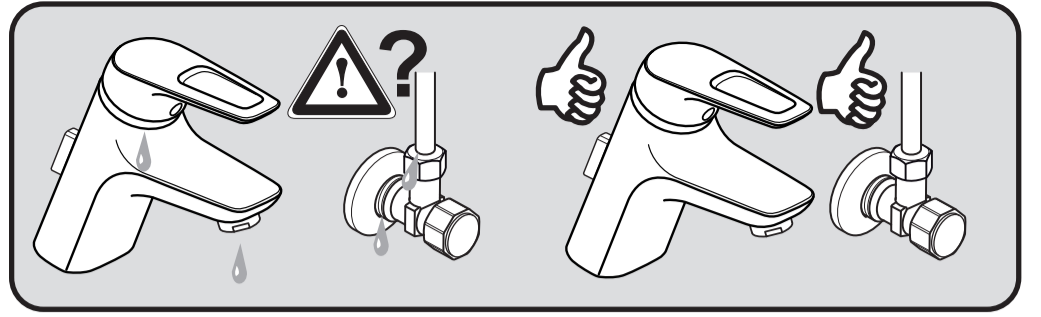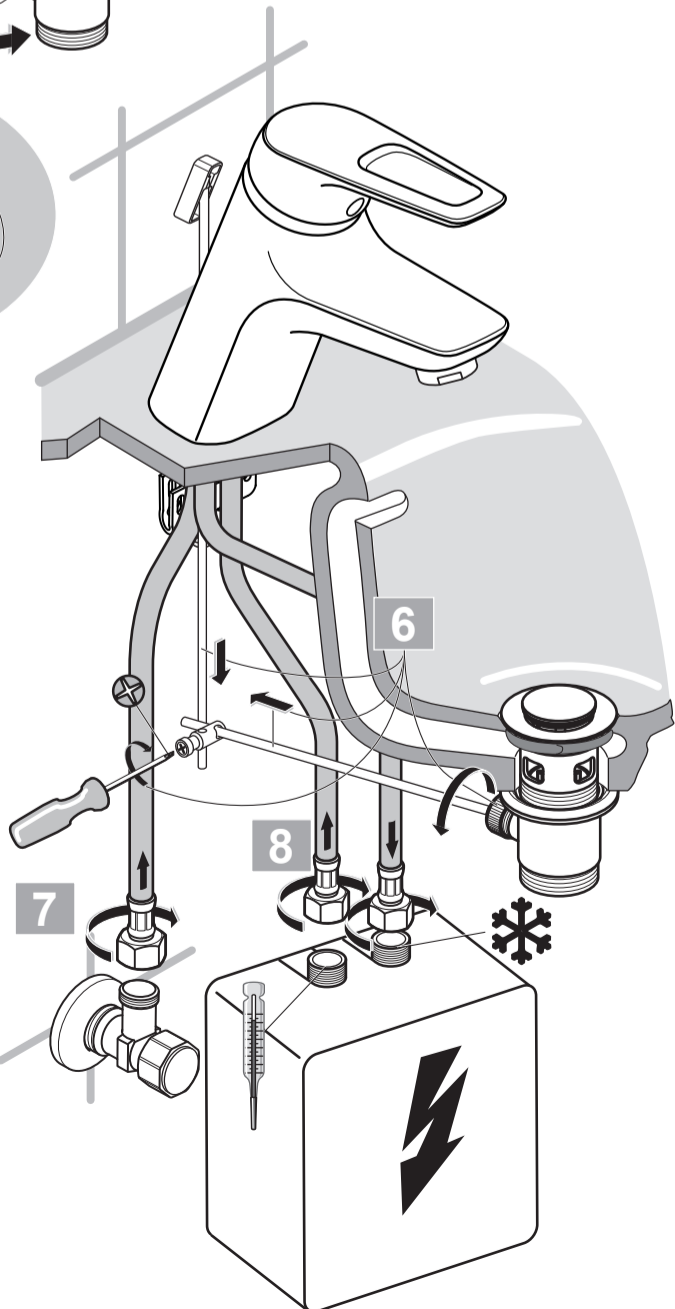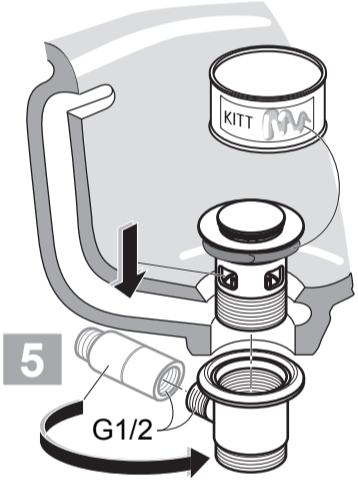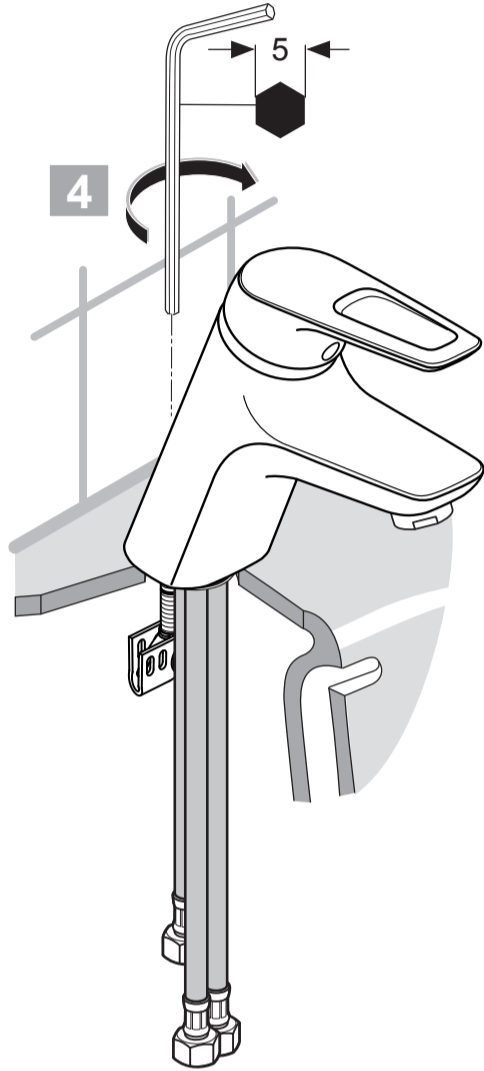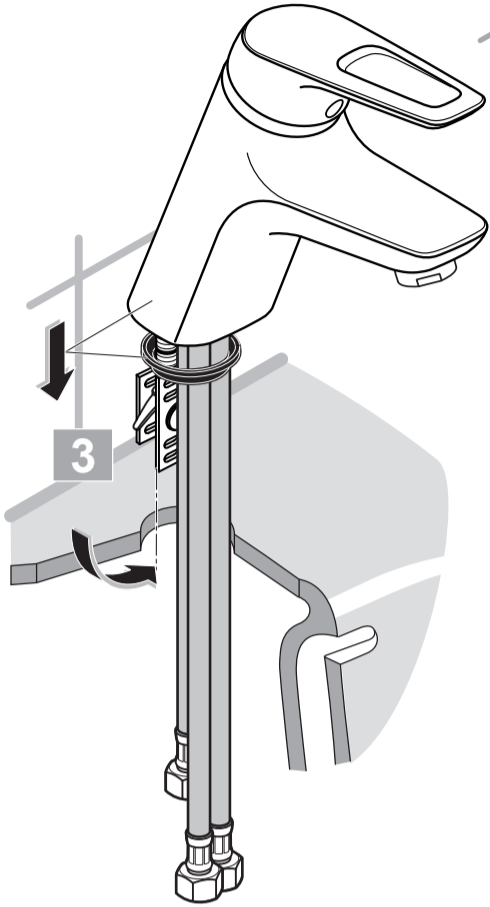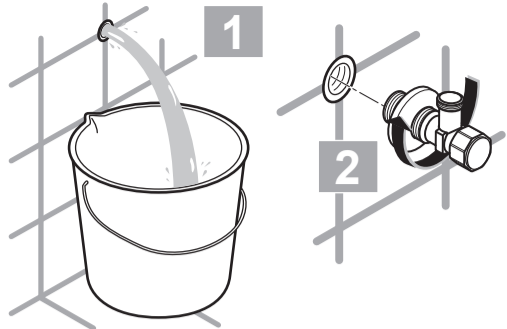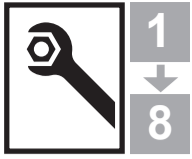

Es ist systembedingt, daß während der Aufheizzeit Wasser durch Ausdehnung am Auslauf abtropft. Dieser freie Austritt verhindert einen Druckanstieg im Speicher. Es darf deshalb niemals der Auslauf verschlossen werden. Der Einbau eines Luftsprudlers oder Schlauches mit Strahlregler ist nicht zulässig. Der im Batteriekörper eingebaute Durchflußbegrenzer macht die Armatur unabhängig vom vorhandenen Wasserdruck. Einregulieren der Wassermenge ist nicht erforderlich. Der Durchflußbegrenzer darf nicht entfernt werden!

As the water heats up, it will expand & possibly discharge through the outlet. This water discharge is normal to prevent pressure damage to the hot water vessel. DO NOT close this outlet. Aerator or hose with flow-straightener should not be used either. The built in flow limiter regulates the supply water pressure, therefore it is not necessary to use other regulating devices to control the flow. DO NOT remove the flow limiter!

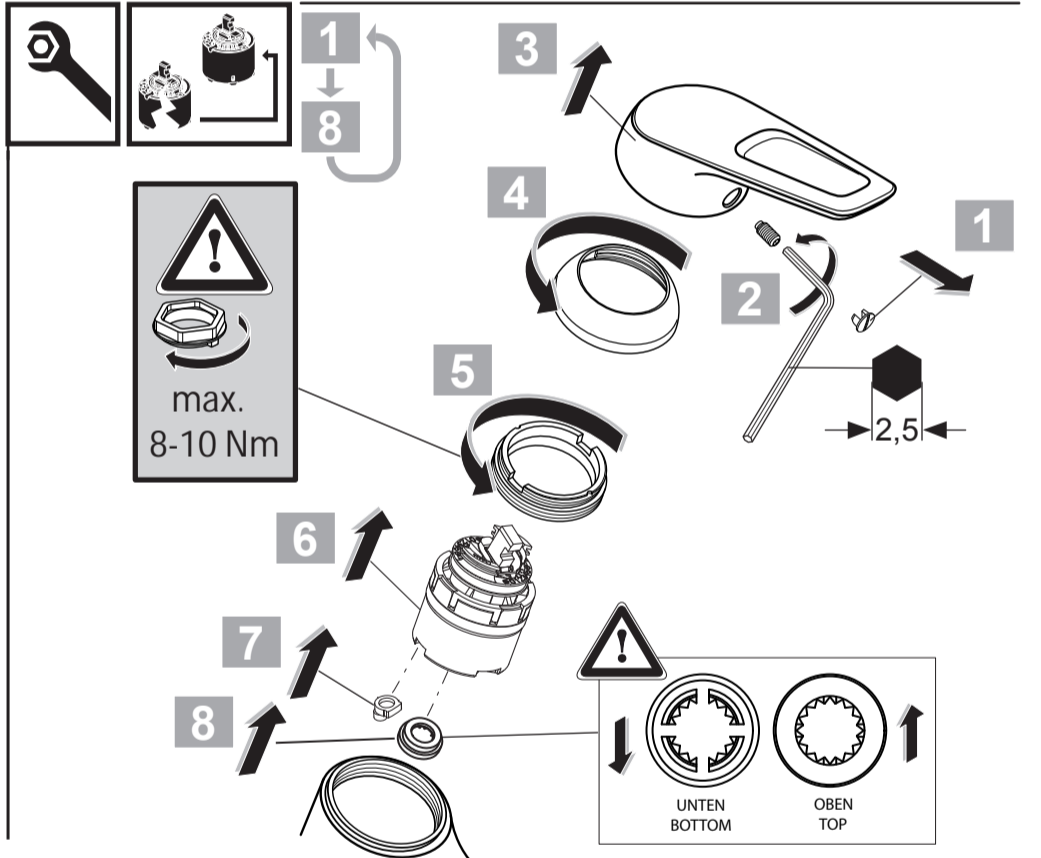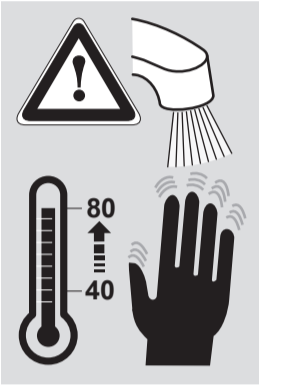

P bar	MAX. 10 0,5	5 1	Q (3 bar)
	T °C	MAX. 80	
			l/min 6

